

**CABLE-C1 COMPATIBLE CAMERAS:**

CANON EOS 10D  
CANON EOS 1D  
CANON EOS 1D C  
CANON EOS 1D MK II  
CANON EOS 1D MK II N  
CANON EOS 1D MK III  
CANON EOS 1D MK IV  
CANON EOS 1D X  
CANON EOS 1D X MK II  
CANON EOS 1D X MK III  
CANON EOS 1DS  
CANON EOS 1DS MK II  
CANON EOS 1DS MK III  
CANON EOS 1V  
CANON EOS 20D  
CANON EOS 20DA  
CANON EOS 3  
CANON EOS 30D  
CANON EOS 40D  
CANON EOS 50D  
CANON EOS 5D  
CANON EOS 5D MK II  
CANON EOS 5D MK III  
CANON EOS 5D MK IV  
CANON EOS 5DS  
CANON EOS 5DS R  
CANON EOS 5DSR  
CANON EOS 6D  
CANON EOS 6D MK II  
CANON EOS 7D  
CANON EOS 7D MK II  
CANON EOS D30  
CANON EOS D60  
CANON EOS R3  
CANON EOS R5  
CANON EOS R5C

**CABLE-C2 COMPATIBLE CAMERAS:**

CANON DIGITAL REBEL	CANON G11	CANON REBEL T6I
CANON EOS 1000D	CANON G12	CANON REBEL T6S
CANON EOS 100D	CANON G15	CANON REBEL T7
CANON EOS 1100D	CANON G16	CANON REBEL T7I
CANON EOS 1200D	CANON G1X	CANON REBEL T8I
CANON EOS 1300D	CANON G1X II	CANON REBEL XS
CANON EOS 1500D	CANON G1X III	CANON REBEL XSI
CANON EOS 2000D	CANON G3X	CANON REBEL XT
CANON EOS 200D	CANON G5X	CANON REBEL XTI
CANON EOS 250D	CANON KISS DIGITAL	CANON SX50 HS
CANON EOS 300D	CANON KISS DIGITAL F	CANON SX60 HS
CANON EOS 350D	CANON KISS DIGITAL N	CANON SX70 HS
CANON EOS 4000D	CANON KISS DIGITAL X	CONTAX 645
CANON EOS 400D	CANON KISS F DIGITAL	CONTAX N
CANON EOS 450D	CANON KISS N	CONTAX N DIGITAL
CANON EOS 500D	CANON KISS X2	CONTAX N1
CANON EOS 550D	CANON KISS X3	CONTAX NX
CANON EOS 600D	CANON KISS X4	FUJIFILM GFX 100
CANON EOS 60D	CANON KISS X5	FUJIFILM GFX 100S
CANON EOS 60DA	CANON KISS X50	FUJIFILM GFX 100S II
CANON EOS 650D	CANON KISS X6	FUJIFILM GFX 50R
CANON EOS 700D	CANON KISS X6I	FUJIFILM GFX 50S
CANON EOS 70D	CANON KISS X70	FUJIFILM GFX 50S II
CANON EOS 750D	CANON KISS X7I	FUJIFILM X100V
CANON EOS 760D	CANON KISS X8I	FUJIFILM X-70
CANON EOS 77D	CANON KISS X9	FUJIFILM X-E1
CANON EOS 8000D	CANON POWERSHOT G1 X	FUJIFILM X-E2
CANON EOS 800D	CANON POWERSHOT G10	FUJIFILM X-E3
CANON EOS 80D	CANON POWERSHOT G11	FUJIFILM X-H2
CANON EOS 850D	CANON POWERSHOT G12	FUJIFILM X-H2S
CANON EOS 90D	CANON POWERSHOT G15	FUJIFILM X-T10
CANON EOS M5	CANON POWERSHOT G16	FUJIFILM X-T20
CANON EOS M5	CANON POWERSHOT G1X II	FUJIFILM X-T3
CANON EOS M6	CANON POWERSHOT G3 X	FUJIFILM X-T30
CANON EOS M6 MK II	CANON POWERSHOT SX50 HS	FUJIFILM X-T4
CANON EOS R	CANON REBEL SL1	FUJIFILM X-T5
CANON EOS R10	CANON REBEL SL2	HASSELBLAD H
CANON EOS R100	CANON REBEL SL3	HASSELBLAD H2D
CANON EOS R6	CANON REBEL T1I	HASSELBLAD H3D
CANON EOS R6 MK II	CANON REBEL T2I	HASSELBLAD H3DII
CANON EOS R7	CANON REBEL T3	HASSELBLAD H4D-200MS
CANON EOS R8	CANON REBEL T3I	HASSELBLAD H4D-31
CANON EOS RA	CANON REBEL T4I	HASSELBLAD H4D-40
CANON EOS REBEL T6	CANON REBEL T5	HASSELBLAD H4D-50
CANON EOS RP	CANON REBEL T5I	HASSELBLAD H4D-50MS
CANON EOS SL2	CANON REBEL T6	HASSELBLAD H4D-60

**CABLE-C2 COMPATIBLE CAMERAS:**

HASSELBLAD H4X	PENTAX MZ-6
HASSELBLAD H5D	PENTAX MZ-L
HASSELBLAD H5D-200	PENTAX ZX-L
HASSELBLAD H5D-200C	SAMSUNG GX-10
HASSELBLAD H5D-200MS	SAMSUNG GX-1L
HASSELBLAD H5D-40	SAMSUNG GX-1S
HASSELBLAD H5D-50	SAMSUNG GX-20
HASSELBLAD H5D-50C	SAMSUNG NX-10
HASSELBLAD H5D-60	SAMSUNG NX-100
HASSELBLAD H5X I	SAMSUNG NX-11
HASSELBLAD H6D	SAMSUNG NX-5
HASSELBLAD H6D-100C	SIGMA SD1
HASSELBLAD H6D-50C	SIGMA SD1 MERRILL
LYTRO ILLUM	SIGMA SD14
OLYMPUS OM-1	SIGMA SD15
OLYMPUS OM-D E-M1 MKII	
OLYMPUS OM-D E-M1 MKIII	
OLYMPUS OM-D E-M1X	
OLYMPUS OM-D E-M5 MKIII	
PENTAX 645D	
PENTAX 645Z	
PENTAX IST D	
PENTAX IST DCABLE-S2	
PENTAX IST DL	
PENTAX IST DL2	
PENTAX IST DS	
PENTAX IST DS2	
PENTAX K1	
PENTAX K10 GRAND PRIX	
PENTAX K100D	
PENTAX K100D SUPER	
PENTAX K10D	
PENTAX K110D	
PENTAX K200D	
PENTAX K20D	
PENTAX K-3	
PENTAX K3 II	
PENTAX K-3 II	
PENTAX K-3 III	
PENTAX K-30	
PENTAX K-5	
PENTAX K-5 II	
PENTAX K-5 IIS	
PENTAX K-50	
PENTAX K-500	
PENTAX K-7	

**CABLE-F1 COMPATIBLE CAMERAS:**

FUJIFILM FINEPIX S1

FUJIFILM X100F

FUJIFILM X-100T

FUJIFILM X-30

FUJIFILM X-A1

FUJIFILM X-A2

FUJIFILM X-A3

FUJIFILM X-E2S

FUJIFILM X-H1

FUJIFILM X-M1

FUJIFILM X-PRO2

FUJIFILM X-Q1

FUJIFILM X-Q2

FUJIFILM X-T1

FUJIFILM X-T2

**CABLE-N1 COMPATIBLE CAMERAS:**

FUJIFILM IS PRO  
FUJIFILM S3-PRO  
FUJIFILM S5-PRO  
KODAK DCS PRO 14N  
NIKON D1  
NIKON D100(WITH MB-D100)  
NIKON D1H  
NIKON D1X  
NIKON D2  
NIKON D200  
NIKON D2H  
NIKON D2HS  
NIKON D2X  
NIKON D2XS  
NIKON D3  
NIKON D300  
NIKON D300S  
NIKON D3S  
NIKON D3X  
NIKON D4  
NIKON D4S  
NIKON D5  
NIKON D500  
NIKON D6  
NIKON D700  
NIKON D800  
NIKON D800 E  
NIKON D810  
NIKON D810 A  
NIKON D810 E  
NIKON D850  
NIKON F100  
NIKON F5  
NIKON F6  
NIKON F90  
NIKON Z8  
NIKON Z9

**CABLE-N2 COMPATIBLE CAMERAS:**

NIKON D70S  
NIKON D80

**CABLE-N3 COMPATIBLE CAMERAS:**

NIKON COOLPIX A  
NIKON COOLPIX P7700  
NIKON COOLPIX P7800  
NIKON D3100  
NIKON D3200  
NIKON D3300  
NIKON D5000  
NIKON D5100  
NIKON D5200  
NIKON D5300  
NIKON D5500  
NIKON D5600  
NIKON D600  
NIKON D610  
NIKON D7000  
NIKON D7100  
NIKON D7200  
NIKON D750  
NIKON D7500  
NIKON D780  
NIKON D90  
NIKON DF  
NIKON P1000  
NIKON P7700  
NIKON P7800  
NIKON P950  
NIKON Z5  
NIKON Z6  
NIKON Z6 II  
NIKON Z6 III  
NIKON Z7  
NIKON Z7 II

**CABLE-O1 COMPATIBLE CAMERAS:**

OLYMPUS E-100  
OLYMPUS E-30  
OLYMPUS E-330  
OLYMPUS E-400  
OLYMPUS E-410  
OLYMPUS E-420  
OLYMPUS E-450  
OLYMPUS E-500  
OLYMPUS E-510  
OLYMPUS E-520  
OLYMPUS E-600  
OLYMPUS E-620  
OLYMPUS EVOLT E-410  
OLYMPUS EVOLT E-510  
OLYMPUS OM-D E-M1  
OLYMPUS OM-D E-M10  
OLYMPUS OM-D E-M10 MKII  
OLYMPUS OM-D E-M5  
OLYMPUS OM-D E-M5 MKII  
OLYMPUS PEN E-P1  
OLYMPUS PEN E-P2  
OLYMPUS PEN E-P2 SE  
OLYMPUS PEN E-P3  
OLYMPUS PEN E-P5  
OLYMPUS PEN E-PL2  
OLYMPUS PEN E-PL3  
OLYMPUS PEN E-PL5  
OLYMPUS PEN E-PL6  
OLYMPUS PEN E-PL7  
OLYMPUS PEN E-PL8  
OLYMPUS PEN E-PM1  
OLYMPUS PEN E-PM2  
OLYMPUS PEN-F  
OLYMPUS SP-510 UZ  
OLYMPUS SP-550  
OLYMPUS SP-550 UZ  
OLYMPUS SP-560  
OLYMPUS SP-560 UZ  
OLYMPUS SP-565 UZ  
OLYMPUS SP-570  
OLYMPUS SP-570 UZ  
OLYMPUS SP-590UZ  
OLYMPUS SP-810 UZ  
OLYMPUS STYLUS 1  
OLYMPUS STYLUS 1S  
OLYMPUS STYLUS SH-2

**CABLE-O2 COMPATIBLE CAMERAS:**

OLYMPUS C2500L  
OLYMPUS C5060  
OLYMPUS C7070  
OLYMPUS C8080  
OLYMPUS E-1  
OLYMPUS E-10  
OLYMPUS E-100 RS  
OLYMPUS E-20  
OLYMPUS E-20N  
OLYMPUS E-3  
OLYMPUS E-300  
OLYMPUS E-5

**CABLE-P1 COMPATIBLE CAMERAS:**

LEICA DIGILUX 2	PANASONIC G70
LEICA DIGILUX 3	PANASONIC G80
LEICA V-LUX 2	PANASONIC G85
LEICA V-LUX 3	PANASONIC G9
LEICA V-LUX 4	PANASONIC G90
LEICA V-LUX 5	PANASONIC GF1
LEICA V-LUX TYP 114	PANASONIC GH1
PANASONIC DC-G9	PANASONIC GH2
PANASONIC DC-GH5	PANASONIC GH3
PANASONIC DMC-2500	PANASONIC GH4
PANASONIC DMC-FZ2000	PANASONIC GH5
PANASONIC DMC-G10	PANASONIC GX1
PANASONIC DMC-G7	PANASONIC GX7
PANASONIC DMC-G80	PANASONIC GX7 L1
PANASONIC DMC-G80	PANASONIC GX8
PANASONIC DMC-G85	PANASONIC L1
PANASONIC DMC-G85	PANASONIC L10
PANASONIC DMC-GF6	PANASONIC LC1
PANASONIC FT 2	PANASONIC S1
PANASONIC FZ100	PANASONIC S1H
PANASONIC FZ1000	PANASONIC S1R
PANASONIC FZ15	PANASONIC S5
PANASONIC FZ150	PANASONIC S5II
PANASONIC FZ20	PANASONIC S5IIX
PANASONIC FZ200	PANASONIC TS2
PANASONIC FZ2000	PANASONIC TS2
PANASONIC FZ20K	
PANASONIC FZ20S	
PANASONIC FZ2500	
PANASONIC FZ30	
PANASONIC FZ300	
PANASONIC FZ30K	
PANASONIC FZ30S	
PANASONIC FZ330	
PANASONIC FZ-35	
PANASONIC FZ-45	
PANASONIC FZ50	
PANASONIC FZ50K	
PANASONIC FZ50S	
PANASONIC G1	
PANASONIC G10	
PANASONIC G2	
PANASONIC G3	
PANASONIC G5	
PANASONIC G6	
PANASONIC G7	

**CABLE-S1 COMPATIBLE CAMERAS:**

MINOLTA DIMAGE 5	MINOLTA MAXXUM 500SI	SONY A99
MINOLTA DIMAGE 5	MINOLTA MAXXUM 500SI	SONY HV
MINOLTA DIMAGE 7	MINOLTA MAXXUM 505SI	
MINOLTA DIMAGE 7	MINOLTA MAXXUM 505SI	
MINOLTA DIMAGE 7HI	MINOLTA MAXXUM 5D	
MINOLTA DIMAGE 7HI	MINOLTA MAXXUM 5D	
MINOLTA DIMAGE 7I	MINOLTA MAXXUM 600SI	
MINOLTA DIMAGE 7I	MINOLTA MAXXUM 600SI	
MINOLTA DIMAGE A1	MINOLTA MAXXUM 7000	
MINOLTA DIMAGE A2	MINOLTA MAXXUM 7000	
MINOLTA DIMAGE A200	MINOLTA MAXXUM 700SI	
MINOLTA DYNAX 3	MINOLTA MAXXUM 700SI	
MINOLTA DYNAX 3	MINOLTA MAXXUM 7D	
MINOLTA DYNAX 4	MINOLTA MAXXUM 7D	
MINOLTA DYNAX 4	MINOLTA MAXXUM 800SI	
MINOLTA DYNAX 5000	MINOLTA MAXXUM 807SI	
MINOLTA DYNAX 5000	MINOLTA MAXXUM 807SI	
MINOLTA DYNAX 500SI	MINOLTA MAXXUM 9	
MINOLTA DYNAX 500SI	MINOLTA MAXXUM 9	
MINOLTA DYNAX 505SI	MINOLTA MAXXUM 9000	
MINOLTA DYNAX 505SI	MINOLTA MAXXUM 9000	
MINOLTA DYNAX 5D	MINOLTA MAXXUM SWEETS	
MINOLTA DYNAX 5D	SONY A100	
MINOLTA DYNAX 600SI	SONY A200	
MINOLTA DYNAX 7	SONY A300	
MINOLTA DYNAX 7	SONY A33	
MINOLTA DYNAX 7000	SONY A35	
MINOLTA DYNAX 7000	SONY A350	
MINOLTA DYNAX 700SI	SONY A37	
MINOLTA DYNAX 7D	SONY A400	
MINOLTA DYNAX 7D	SONY A450	
MINOLTA DYNAX 800SI	SONY A500	
MINOLTA DYNAX 807SI	SONY A55	
MINOLTA DYNAX 9	SONY A550	
MINOLTA DYNAX 9	SONY A550V	
MINOLTA DYNAX 9000	SONY A560	
MINOLTA DYNAX 9000	SONY A57	
MINOLTA DYNAX SWEET	SONY A580	
MINOLTA DYNAX SWEETS	SONY A65	
MINOLTA DYNAX SWEETS	SONY A65V	
MINOLTA MAXXUM 3	SONY A700	
MINOLTA MAXXUM 3	SONY A77	
MINOLTA MAXXUM 4	SONY A77II	
MINOLTA MAXXUM 4	SONY A77V	
MINOLTA MAXXUM 5000	SONY A850	
MINOLTA MAXXUM 5000	SONY A900	



**CABLE-S2 COMPATIBLE CAMERAS:**

SONY A1  
SONY A3000  
SONY A3500  
SONY A5000  
SONY A5100  
SONY A58  
SONY A6000  
SONY A6100  
SONY A6300  
SONY A6400  
SONY A6500  
SONY A6600  
SONY A68  
SONY A7  
SONY A7II  
SONY A7III  
SONY A7IV  
SONY A7R  
SONY A7R II  
SONY A7R III  
SONY A7R IV  
SONY A7R V  
SONY A7S  
SONY A7S II  
SONY A7S III  
SONY A9  
SONY A9 II  
SONY A9 III  
SONY A99II  
SONY HX300  
SONY HX350  
SONY HX400V  
SONY HX50V  
SONY HX60  
SONY HX60V  
SONY HX80  
SONY HX90  
SONY HX90V  
SONY NEX 3N  
SONY NEX-3NL  
SONY RX10  
SONY RX10 II  
SONY RX10 III  
SONY RX10 IV  
SONY RX100 II  
SONY RX100 III

SONY RX100 IV  
SONY RX100 PLATINUM  
SONY RX100 V  
SONY RX100 VI  
SONY RX100 VII  
SONY RX1R II