

MIOPS Camera Cable Compatibility List

Brand	Model	Cable
Canon	Eos 5d mk ii	Cable-C1
Canon	Eos 20d	Cable-C1
Canon	Eos 7d mk ii	Cable-C1
Canon	Eos 6d mk ii	Cable-C1
Canon	Eos 6d	Cable-C1
Canon	Eos d30	Cable-C1
Canon	Eos d60	Cable-C1
Canon	Eos 5dsr	Cable-C1
Canon	Eos 5ds	Cable-C1
Canon	Eos 5d mk iv	Cable-C1
Canon	Eos 5d mk iii	Cable-C1
Canon	Eos 50d	Cable-C1
Canon	Eos 5d	Cable-C1
Canon	Eos 40d	Cable-C1
Canon	Eos 10d	Cable-C1
Canon	Eos 20da	Cable-C1
Canon	Eos 30d	Cable-C1
Canon	Eos 1ds mk iii	Cable-C1
Canon	Eos 1ds mk ii	Cable-C1
Canon	EOS 3	Cable-C1
Canon	EOS 5DS R	Cable-C1
Canon	EOS 1V	Cable-C1
Canon	Eos 1d	Cable-C1
Canon	Eos 1d c	Cable-C1
Canon	Eos 1d mk ii	Cable-C1
Canon	Eos 1d mk ii n	Cable-C1
Canon	Eos 1d mk iii	Cable-C1
Canon	Eos 1d mk iv	Cable-C1
Canon	Eos 1d x	Cable-C1
Canon	Eos 1d x mk ii	Cable-C1
Canon	Eos 1ds	Cable-C1
Canon	Eos 7d	Cable-C1
Canon	Eos 400d	Cable-C2
Canon	Eos 600d	Cable-C2
Canon	Rebel t6i	Cable-C2
Canon	Eos 350d	Cable-C2
Canon	Eos 300d	Cable-C2
Canon	Rebel t6	Cable-C2
Canon	Digital rebel	Cable-C2
Canon	Rebel xti	Cable-C2
Canon	Rebel xt	Cable-C2
Canon	Rebel xsi	Cable-C2
Canon	Rebel xs	Cable-C2
Canon	Rebel t7i	Cable-C2
Canon	Rebel t6s	Cable-C2
Canon	Eos 77D	Cable-C2
Canon	Eos 1200d	Cable-C2
Canon	Eos 1100d	Cable-C2
Canon	Eos 100d	Cable-C2
Canon	Kiss f digital	Cable-C2
Canon	Kiss digital	Cable-C2
Canon	Kiss x2	Cable-C2
Canon	Powershot g10	Cable-C2
Canon	Powershot sx50 hs	Cable-C2
Canon	Kiss x3	Cable-C2
Canon	Eos 1000d	Cable-C2
Canon	Powershot g15	Cable-C2
Canon	Powershot g12	Cable-C2
Canon	Powershot g11	Cable-C2
Canon	Powershot g3 x	Cable-C2
Canon	Powershot g1 x	Cable-C2
Canon	Kiss x50	Cable-C2
Canon	Kiss x5	Cable-C2
Canon	Kiss x4	Cable-C2
Canon	Kiss x6	Cable-C2
Canon	Powershot s95	Not Supported
Canon	Powershot sx510 hs	Not Supported
Canon	XC10	Not Supported

Canon	Rebel t5i	Cable-C2
Canon	Rebel t4i	Cable-C2
Canon	Rebel t3i	Cable-C2
Canon	Rebel t3	Cable-C2
Canon	Eos SL2	Cable-C2
Canon	G3X	Cable-C2
Canon	Eos 200d	Cable-C2
Canon	G5X	Cable-C2
Canon	EOS R	Cable-C2
Canon	Rebel T5	Cable-C2
Canon	SX60 HS	Cable-C2
Canon	SX50 HS	Cable-C2
Canon	G16	Cable-C2
Canon	G15	Cable-C2
Canon	G12	Cable-C2
Canon	G11	Cable-C2
Canon	Rebel t1i	Cable-C2
Canon	Eos 8000d	Cable-C2
Canon	G1X II	Cable-C2
Canon	G1X	Cable-C2
Canon	Kiss X8i	Cable-C2
Canon	Kiss X7i	Cable-C2
Canon	Kiss X6i	Cable-C2
Canon	Kiss X70	Cable-C2
Canon	Kiss Digital X	Cable-C2
Canon	Kiss Digital N	Cable-C2
Canon	Kiss Digital F	Cable-C2
Canon	Rebel t2i	Cable-C2
Canon	Powershot g16	Cable-C2
Canon	Rebel sl1	Cable-C2
Canon	Eos 700d	Cable-C2
Canon	Eos rebel t6	Cable-C2
Canon	Eos m6	Cable-C2
Canon	Eos m5	Cable-C2
Canon	Eos 80d	Cable-C2
Canon	Eos 800d	Cable-C2
Canon	Eos 760d	Cable-C2
Canon	Eos 750d	Cable-C2
Canon	Eos 70d	Cable-C2
Canon	Eos 650d	Cable-C2
Canon	Kiss n	Cable-C2
Canon	Eos 60da	Cable-C2
Canon	Eos 60d	Cable-C2
Canon	Eos 550d	Cable-C2
Canon	Eos 450d	Cable-C2
Canon	Eos 500d	Cable-C2
Canon	Eos 1300d	Cable-C2
Fujifilm	X-100t	Cable-F1
Fujifilm	Gfx 50s	Cable-F1
Fujifilm	X-a1	Cable-F1
Fujifilm	X-m1	Cable-F1
Hasselblad	H4d-31	Cable-C2
Hasselblad	H4d-40	Cable-C2
Hasselblad	H4d-50	Cable-C2
Hasselblad	H4d-50ms	Cable-C2
Hasselblad	H4d-60	Cable-C2
Hasselblad	H6d-100c	Cable-C2
Hasselblad	H6d-50c	Cable-C2
Hasselblad	H5d	Cable-C2
Hasselblad	H6d	Cable-C2
Hasselblad	HV	Cable-S1
Hasselblad	X1d	Not Supported
Konica Minolta	Dimage 5	Cable-S1
Konica Minolta	Maxxum 7000	Cable-S1
Konica Minolta	Maxxum 4	Cable-S1
Konica Minolta	Maxxum 5000	Cable-S1
Konica Minolta	Maxxum 500si	Cable-S1
Konica Minolta	Maxxum 505si	Cable-S1
Konica Minolta	Maxxum 5d	Cable-S1

Canon	SX510 HS	Not Supported
Canon	Powershot g7	Not Supported
Canon	EOS M3	Not Supported
Canon	Powershot s110	Not Supported
Canon	Powershot s90	Not Supported
Canon	Powershot s120	Not Supported
Canon	Powershot s100	Not Supported
Canon	Powershot n	Not Supported
Canon	Powershot g9	Not Supported
Canon	Eos m	Not Supported
Canon	EOS M50	Not Supported
Fujifilm	X-t3	Cable-C2
Fujifilm	X-e1	Cable-C2
Fujifilm	X-70	Cable-C2
Fujifilm	X-t10	Cable-C2
Fujifilm	X-t20	Cable-C2
Fujifilm	X-e2	Cable-C2
Fujifilm	X-e3	Cable-C2
Fujifilm	X-pro2	Cable-F1
Fujifilm	X-q1	Cable-F1
Fujifilm	X-100T	Cable-F1
Fujifilm	X-30	Cable-F1
Fujifilm	X-q2	Cable-F1
Fujifilm	X-a3	Cable-F1
Fujifilm	X-a2	Cable-F1
Fujifilm	X-e2s	Cable-F1
Fujifilm	X-H1	Cable-F1
Fujifilm	X-t1	Cable-F1
Fujifilm	X100f	Cable-F1
Fujifilm	X-t2	Cable-F1
Fujifilm	Finepix s1	Cable-F1
Fujifilm	S5-pro	Cable-N1
Fujifilm	S3-pro	Cable-N1
Hasselblad	H	Cable-C2
Hasselblad	H3d	Cable-C2
Hasselblad	H4d-200ms	Cable-C2
Minolta	Maxxum 600si	Cable-S1
Minolta	Maxxum 5d	Cable-S1
Minolta	Maxxum 505si	Cable-S1
Minolta	Maxxum 500si	Cable-S1
Minolta	Maxxum 5000	Cable-S1
Minolta	Maxxum 4	Cable-S1
Minolta	Maxxum 3	Cable-S1
Minolta	Dynax sweets	Cable-S1
Minolta	Dynax 9	Cable-S1
Minolta	Dimage 7	Cable-S1
Minolta	Dynax 3	Cable-S1
Minolta	Dimage 7hi	Cable-S1
Minolta	Dimage 7i	Cable-S1
Minolta	Dimage a1	Cable-S1
Minolta	Dimage a2	Cable-S1
Minolta	Dimage a200	Cable-S1
Minolta	Dynax 4	Cable-S1
Minolta	Dynax 7d	Cable-S1
Minolta	Dynax 5000	Cable-S1
Minolta	Dynax 500si	Cable-S1
Minolta	Dynax 505si	Cable-S1
Minolta	Dynax 5d	Cable-S1
Minolta	Dynax 7	Cable-S1
Minolta	Dynax 7000	Cable-S1
Minolta	Maxxum 9000	Cable-S1
Minolta	Maxxum 7	Not Supported
Nikon	F5	Cable-N1
Nikon	F100	Cable-N1
Nikon	D3s	Cable-N1
Nikon	D3x	Cable-N1
Nikon	D4	Cable-N1
Nikon	D4s	Cable-N1
Nikon	F6	Cable-N1
Nikon	D500	Cable-N1
Nikon	F90	Cable-N1
Nikon	D300	Cable-N1

Konica Minolta	Maxxum 600si	Cable-S1
Konica Minolta	Maxxum 700si	Cable-S1
Konica Minolta	Dynax sweets	Cable-S1
Konica Minolta	Maxxum 7d	Cable-S1
Konica Minolta	Maxxum 800si	Cable-S1
Konica Minolta	Maxxum 807si	Cable-S1
Konica Minolta	Maxxum 9	Cable-S1
Konica Minolta	Maxxum 9000	Cable-S1
Konica Minolta	Maxxum sweets	Cable-S1
Konica Minolta	Maxxum 3	Cable-S1
Konica Minolta	Dynax sweet	Cable-S1
Konica Minolta	Dimage 7	Cable-S1
Konica Minolta	Dynax 5d	Cable-S1
Konica Minolta	Dimage 7hi	Cable-S1
Konica Minolta	Dimage 7i	Cable-S1
Konica Minolta	Dynax 4	Cable-S1
Konica Minolta	Dynax 5000	Cable-S1
Konica Minolta	Dynax 500si	Cable-S1
Konica Minolta	Dynax 505si	Cable-S1
Konica Minolta	Dynax 600si	Cable-S1
Konica Minolta	Dynax 9000	Cable-S1
Konica Minolta	Dynax 7	Cable-S1
Konica Minolta	Dynax 7000	Cable-S1
Konica Minolta	Dynax 700si	Cable-S1
Konica Minolta	Dynax 7d	Cable-S1
Konica Minolta	Dynax 800si	Cable-S1
Konica Minolta	Dynax 807si	Cable-S1
Konica Minolta	Dynax 9	Cable-S1
Konica Minolta	Dynax 3	Cable-S1
Minolta	Dimage 5	Cable-S1
Minolta	Dynax 9000	Cable-S1
Minolta	Maxxum 9	Cable-S1
Minolta	Maxxum 807si	Cable-S1
Minolta	Maxxum 7d	Cable-S1
Minolta	Maxxum 700si	Cable-S1
Minolta	Maxxum 7000	Cable-S1
Nikon	D2xs	Cable-N1
Nikon	D100(with mb-d100)	Cable-N1
Nikon	D70s	Cable-N2
Nikon	D80	Cable-N2
Nikon	P7700	Cable-N3
Nikon	Z7	Cable-N3
Nikon	P7800	Cable-N3
Nikon	Z6	Cable-N3
Nikon	D90	Cable-N3
Nikon	P1000	Cable-N3
Nikon	D7500	Cable-N3
Nikon	D750	Cable-N3
Nikon	Df	Cable-N3
Nikon	D7200	Cable-N3
Nikon	D7100	Cable-N3
Nikon	Coolpix p7800	Cable-N3
Nikon	D600	Cable-N3
Nikon	D7000	Cable-N3
Nikon	D610	Cable-N3
Nikon	D3100	Cable-N3
Nikon	D3200	Cable-N3
Nikon	D3300	Cable-N3
Nikon	Coolpix A	Cable-N3
Nikon	D5000	Cable-N3
Nikon	D5500	Cable-N3
Nikon	D5100	Cable-N3
Nikon	D5200	Cable-N3
Nikon	D5300	Cable-N3
Nikon	Coolpix P7700	Cable-N3
Nikon	D5600	Cable-N3
Nikon	Coolpix P610	Not Supported
Nikon	D3400	Not Supported
Nikon	1J3	Not Supported
Nikon	Coolpix L840	Not Supported
Nikon	Coolpix P900	Not Supported
Nikon	1 aw1	Not Supported

Nikon	D800	Cable-N1
Nikon	D800 e	Cable-N1
Nikon	D810	Cable-N1
Nikon	D810 a	Cable-N1
Nikon	D810 e	Cable-N1
Nikon	D850	Cable-N1
Nikon	D700	Cable-N1
Nikon	D300s	Cable-N1
Nikon	D5	Cable-N1
Nikon	D3	Cable-N1
Nikon	D2h	Cable-N1
Nikon	D1h	Cable-N1
Nikon	D1	Cable-N1
Nikon	D1x	Cable-N1
Nikon	D200	Cable-N1
Nikon	D2	Cable-N1
Nikon	D2hs	Cable-N1
Nikon	D2x	Cable-N1
Olympus	Pen e-p2	Cable-O1
Olympus	Pen e-p3	Cable-O1
Olympus	Pen e-p5	Cable-O1
Olympus	Pen e-pl2	Cable-O1
Olympus	Pen e-pl3	Cable-O1
Olympus	Pen e-pm1	Cable-O1
Olympus	Sp-510 uz	Cable-O1
Olympus	Om-d e-m10	Cable-O1
Olympus	Sp-550	Cable-O1
Olympus	Sp-550 uz	Cable-O1
Olympus	Sp-560	Cable-O1
Olympus	Sp-560 uz	Cable-O1
Olympus	Sp-565 uz	Cable-O1
Olympus	Sp-570	Cable-O1
Olympus	Sp-570 uz	Cable-O1
Olympus	Sp-590uz	Cable-O1
Olympus	Stylus 1	Cable-O1
Olympus	Xz-1	Cable-O1
Olympus	Om-d e-m5	Cable-O1
Olympus	Om-d e-m1	Cable-O1
Olympus	Xz-2 ihs	Cable-O1
Olympus	Pen e-p2 se	Cable-O1
Olympus	Stylus SH-2	Cable-O1
Olympus	Stylus 1S	Cable-O1
Olympus	Xz 2ihs	Cable-O1
Olympus	Sz-11	Cable-O1
Olympus	Sz-20	Cable-O1
Olympus	Sz-30 MR	Cable-O1
Olympus	Sp-810 uz	Cable-O1
Olympus	Pen e-pl6	Cable-O1
Olympus	E-30	Cable-O1
Olympus	Pen-F	Cable-O1
Olympus	Evolt e-510	Cable-O1
Olympus	E-400	Cable-O1
Olympus	E-410	Cable-O1
Olympus	E-420	Cable-O1
Olympus	E-450	Cable-O1
Olympus	Om-d e-m10 mkii	Cable-O1
Olympus	E-510	Cable-O1
Olympus	E-520	Cable-O1
Olympus	E-600	Cable-O1
Olympus	E-620	Cable-O1
Olympus	Evolt e-410	Cable-O1
Olympus	Xz-2	Cable-O1
Olympus	C2500l	Cable-O2
Olympus	E-5	Cable-O2
Olympus	E-20n	Cable-O2
Olympus	C7070	Cable-O2
Olympus	C8080	Cable-O2
Olympus	E-1	Cable-O2
Olympus	E-10	Cable-O2
Olympus	E-100 rs	Cable-O2
Olympus	E-20	Cable-O2
Olympus	E-3	Cable-O2

Nikon	D70	Not Supported
Nikon	D60	Not Supported
Nikon	1 j1	Not Supported
Nikon	D50	Not Supported
Nikon	D40x	Not Supported
Nikon	D40	Not Supported
Nikon	D3000	Not Supported
Nikon	D100	Not Supported
Nikon	1 v1	Not Supported
Nikon	1 s1	Not Supported
Nikon	1 j3	Not Supported
Nikon	1 j2	Not Supported
Nikon	D3500	Not Supported
Olympus	Om-d e-m1 mkii	Cable-C2
Olympus	Pen e-pl5	Cable-O1
Olympus	Pen e-pm2	Cable-O1
Olympus	Om-d e-m5 mkii	Cable-O1
Olympus	Pen e-p1	Cable-O1
Olympus	C5060	Cable-O2
Olympus	E-300	Cable-O2
Olympus	E-330	Not Supported
Olympus	Evolt e-500	Not Supported
Olympus	Evolt e-330	Not Supported
Olympus	Pen e-pl1	Not Supported
Olympus	Pen e-pl1s	Not Supported
Olympus	E-500	Not Supported
Olympus	Om-d e-m10 mkiii	Not Supported
Panasonic	Dmc-g80	Cable-P1
Panasonic	FZ330	Cable-P1
Panasonic	Gx1	Cable-P1
Panasonic	Gx7	Cable-P1
Panasonic	Gx8	Cable-P1
Panasonic	L1	Cable-P1
Panasonic	L10	Cable-P1
Panasonic	Lc1	Cable-P1
Panasonic	Ts2	Cable-P1
Panasonic	Fz200	Cable-P1
Panasonic	G9	Cable-P1
Panasonic	Fz2000	Cable-P1
Panasonic	Gh4	Cable-P1
Panasonic	Fz2500	Cable-P1
Panasonic	Fz20k	Cable-P1
Panasonic	Fz30s	Cable-P1
Panasonic	Fz30k	Cable-P1
Panasonic	Fz300	Cable-P1
Panasonic	Fz50k	Cable-P1
Panasonic	G7	Cable-P1
Panasonic	G80	Cable-P1
Panasonic	G85	Cable-P1
Panasonic	Ft 2	Cable-P1
Panasonic	Gh5	Cable-P1
Panasonic	Gh3	Cable-P1
Panasonic	G2	Cable-P1
Panasonic	Fz100	Cable-P1
Panasonic	Fz1000	Cable-P1
Panasonic	Fz15	Cable-P1
Panasonic	Fz150	Cable-P1
Panasonic	Fz20	Cable-P1
Panasonic	Fz30	Cable-P1
Panasonic	Fz50	Cable-P1
Panasonic	Gh2	Cable-P1
Panasonic	G10	Cable-P1
Panasonic	G1	Cable-P1
Panasonic	G3	Cable-P1
Panasonic	Gh1	Cable-P1
Panasonic	G6	Cable-P1
Panasonic	G70	Cable-P1
Panasonic	Gf1	Cable-P1
Panasonic	G5	Cable-P1
Panasonic	G81	Not Supported
Panasonic	Lx7	Not Supported
Panasonic	Lx5	Not Supported

Panasonic	Fz72	Not Supported
Panasonic	Gf3	Not Supported
Panasonic	Gm1	Not Supported
Panasonic	Gf5	Not Supported
Panasonic	Gf2	Not Supported
Panasonic	Fz35	Not Supported
Panasonic	Fz45	Not Supported
Panasonic	Gx9	Not Supported
Pentax	K20d	Cable-C2
Pentax	K10d	Cable-C2
Pentax	Mz-l	Cable-C2
Pentax	Mz-6	Cable-C2
Pentax	K-7	Cable-C2
Pentax	K-500	Cable-C2
Pentax	K-50	Cable-C2
Pentax	K-5 iis	Cable-C2
Pentax	K-5 ii	Cable-C2
Pentax	K-5	Cable-C2
Pentax	K-30	Cable-C2
Pentax	K-3	Cable-C2
Pentax	lst ds2	Cable-C2
Pentax	K200d	Cable-C2
Pentax	K110d	Cable-C2
Pentax	K100d super	Cable-C2
Pentax	645z	Cable-C2
Pentax	K100d	Cable-C2
Pentax	K10 grand prix	Cable-C2
Pentax	K1	Cable-C2
Pentax	lst ds	Cable-C2
Pentax	lst dl2	Cable-C2
Pentax	lst dl	Cable-C2
Pentax	lst dcable-s2	Cable-C2
Pentax	lst d	Cable-C2
Pentax	645d	Cable-C2
Pentax	K3 ii	Cable-C2
Pentax	KP	Cable-C2
Pentax	Zx-l	Cable-C2
Pentax	KS-2	Not Supported
Pentax	QS-1	Not Supported
Pentax	K-01	Not Supported
Pentax	KS-1	Not Supported
Pentax	K-m	Not Supported
Pentax	Q	Not Supported
Pentax	Mx-1	Not Supported
Pentax	K-x	Not Supported
Pentax	K-r	Not Supported
Pentax	K70	Not Supported
Samsung	Gx-20	Cable-C2
Samsung	Gx-1s	Cable-C2
Samsung	Gx-1l	Cable-C2
Samsung	Gx-10	Cable-C2
Samsung	Nx-10	Cable-C2
Samsung	Nx-100	Cable-C2
Samsung	Nx-11	Cable-C2
Sony	A3500	Cable-S2
Sony	A5000	Cable-S2
Sony	Hx60v	Cable-S2
Sony	Hx80	Cable-S2
Sony	Hx90v	Cable-S2
Sony	Hx90	Cable-S2
Sony	Nex-3nl	Cable-S2
Sony	Rx10 iv	Cable-S2
Sony	Rx100 vi	Cable-S2
Sony	Rx10	Cable-S2
Sony	RX0	Cable-S2
Sony	A9	Cable-S2
Sony	A7ii	Cable-S2
Sony	A7riii	Cable-S2
Sony	A7rii	Cable-S2
Sony	A7r	Cable-S2
Sony	A99ii	Cable-S2
Sony	Hx300	Cable-S2

Samsung	Nx-5	Cable-C2
Samsung	Ex2f	Cable-SA1
Samsung	Nx300m	Cable-SA1
Samsung	Nx300	Cable-SA1
Samsung	Galaxy nx	Cable-SA1
Samsung	Nx30	Cable-SA1
Samsung	Nx210	Cable-SA1
Samsung	Nx2000	Cable-SA1
Samsung	Nx20	Cable-SA1
Samsung	Nx1100	Cable-SA1
Samsung	Nx1000	Cable-SA1
Samsung	Nx-500	Cable-SA1
Samsung	Nx-1	Cable-SA1
Samsung	Nx mini	Cable-SA1
Samsung	Nx200	Not Supported
Samsung	Nx3000	Not Supported
Sony	A100	Cable-S1
Sony	A55	Cable-S1
Sony	A99	Cable-S1
Sony	A200	Cable-S1
Sony	A850	Cable-S1
Sony	A77v	Cable-S1
Sony	A77ii	Cable-S1
Sony	A77	Cable-S1
Sony	A700	Cable-S1
Sony	A65v	Cable-S1
Sony	A65	Cable-S1
Sony	A580	Cable-S1
Sony	A57	Cable-S1
Sony	A560	Cable-S1
Sony	A550v	Cable-S1
Sony	A550	Cable-S1
Sony	A900	Cable-S1
Sony	A37	Cable-S1
Sony	A500	Cable-S1
Sony	A450	Cable-S1
Sony	A400	Cable-S1
Sony	A33	Cable-S1
Sony	A35	Cable-S1
Sony	A350	Cable-S1
Sony	A300	Cable-S1
Sony	A5100	Cable-S2
Sony	Rx100 v	Cable-S2
Sony	Rx100 iv	Cable-S2
Sony	Rx100 platinum	Cable-S2
Sony	A3000	Cable-S2
Sony	Rx100 iii	Cable-S2
Sony	Rx100 ii	Cable-S2
Sony	Rx10 iii	Cable-S2
Sony	Rx10 ii	Cable-S2
Sony	A58	Cable-S2
Sony	Hx60	Cable-S2
Sony	A7iii	Cable-S2
Sony	Hx400V	Cable-S2

Sony	Hx50v	Cable-S2
Sony	Nex 3n	Cable-S2
Sony	A7sii	Cable-S2
Sony	A7s	Cable-S2
Sony	A7	Cable-S2
Sony	A68	Cable-S2
Sony	A6500	Cable-S2
Sony	A6300	Cable-S2
Sony	A6000	Cable-S2
Sony	A380	Not Supported
Sony	Nex-5r	Not Supported
Sony	A390	Not Supported
Sony	A330	Not Supported
Sony	Nex-3c	Not Supported
Sony	Rx1r	Not Supported
Sony	Nex-5	Not Supported
Sony	A290	Not Supported
Sony	A230	Not Supported
Sony	Rx1	Not Supported
Sony	Qx-100	Not Supported
Sony	Qx-10	Not Supported
Sony	Nex-f3	Not Supported
Sony	Nex-c3	Not Supported
Sony	Nex-7	Not Supported
Sony	Nex-6	Not Supported
Sony	Nex-5t	Not Supported
Sony	Nex-5n	Not Supported
Sony	Nex-3	Not Supported
Sony	Nex-5c	Not Supported